RadioShack®

Cat. No. 60-1184

Light-Up Froggy

Recommended for children ages 3 and up, the Light-Up Froggy helps light the way in the dark!

INSTALLING BATTERIES

You need two C batteries (not supplied) to power the Light-Up Froggy. We recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

1. Remove the screw from the battery compartment's cover, then push a flathead screwdriver into the cover's slot and gently pry open the cover.

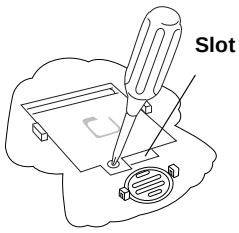

2. Place the batteries in the compartment as indicated by the polarity symbols (+ and –) marked inside.

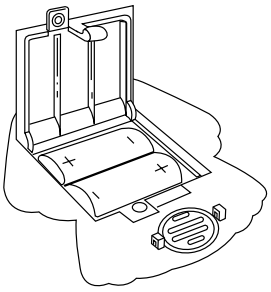

3. Close the cover and replace the screw.

Replace the batteries when the Light-Up Froggy's light dims.

Warning: Dispose of batteries promptly and properly. Do not bury or burn them.

Caution: If you do not plan to use the light for several weeks, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

OPERATION

Push the latch on the Froggy's handle forward. The Froggy's mouth opens and the light turns on. Close the Froggy's mouth to turn off the light.

© 1999 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation.

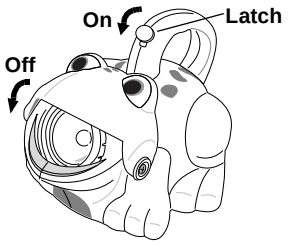

REPLACING THE BULB

If the bulb goes out, replace it with a new 2.47-volt, 300 mA Type 14 bulb (not supplied), available at your local RadioShack store.

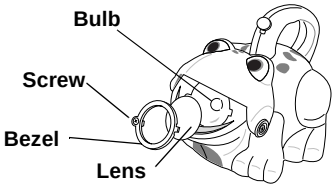

1. Push the latch on the Froggy's handle forward to open its mouth.
2. Use a screwdriver to remove the bezel screw, then gently pry off the bezel securing the bulb's lens.
3. Remove the lens and rotate the old bulb counterclockwise to remove it.
4. Install a fresh bulb by threading it clockwise into the bulb socket.
5. Replace the lens, snap the bezel in place, and replace the screw.

CARE

To enjoy your Light-Up Froggy for a long time:

- Keep the Froggy dry and away from dust and dirt.
- Use and store the Froggy only in normal temperature environments.
- Handle the Froggy gently and carefully. Don't drop it.

Modifying or tampering with the Froggy's internal components can cause a malfunction and invalidate its warranty. If your Froggy is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.
In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
RadioShack Customer Relations, Dept. W, 200 Taylor St., 6th Floor, Fort Worth, TX 76102

We Service What We Sell *4/99*

07A99N Printed in China